


YEAR	MAKE	MODEL	CON
2003-07	HONDA	ACCORD	A
2008-09	HONDA	ACCORD	B
2006-09	HONDA	CIVIC	D,E
2006-09	HONDA	RIDGELINE	A
2005-06	HONDA	CRV	A
2007-09	HONDA	CRV	D,E
2003-09	HONDA	ELEMENT	A
2005-08	HONDA	ODYSSEY	A
2009	HONDA	ODYSSEY	D,E
2006-08	HONDA	PILOT	A
2009	HONDA	PILOT	B
2007-08	HONDA	FIT	D,E
2009	HONDA	FIT	B
2004-09	HONDA	S2000	A
2004-08	ACURA	TSX	A
2005-06	ACURA	MDX	A
2007-08	ACURA	MDX	C
2007-08	ACURA	RDX	C
2005-08	ACURA	RL	A
2004-08	ACURA	TL	A

NOTE: WIRE COLORS MAY VARY FROM THOSE LISTED

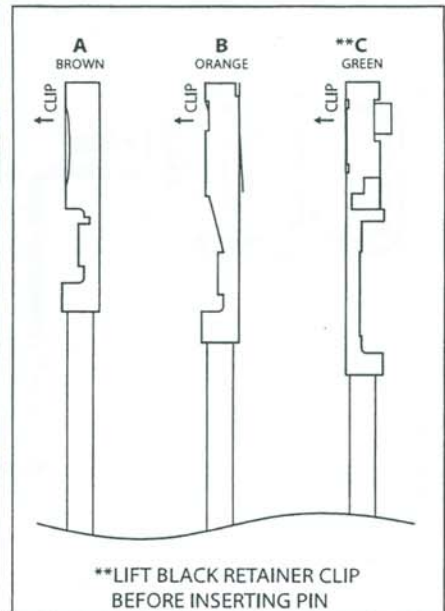

INSTALLATION

Tech Tip: When mounting the BFHA make sure to be clear of all moving mechanical device that may hit or damage the interface. Keep away from any hot surface areas like heater ducts direct sun light and metal surface areas that have the potential of getting hot.

BFHA INTERFACE INSTALLATION

1. Remove radio
2. Insert Scosche "T" harness into radio and factory harness
3. locate Steering Wheel Control information from the list on reverse page
4. Use supplied T-Tap to tap SWC wire then connect to appropriate T-harness SWC wire.
5. If SWC wire is not present, insert supplied terminated cable into the the SWC wire's location then connect to appropriate T-harness SWC wire.
6. Plug 24pin plug into Bluefusion interface.

BFHA MICROPHONE INSTALLATION

1. Attach the microphone on the headliner above the rear view mirror.
2. Route the microphone cable through the headliner and "A" pillar to the interface location.
3. Plug in the 3-pin molex connector to the pigtail on the Scosche "T" harness.



Telephone +1 (713) 482 - 8656
 Fax +1 (281) 397 - 6662
 eMail support@bftsync.com
 Internet www.bftsync.com

